


How to Replace the 2-BUS-LT Face Plate

Remove the 8 screws from the lid



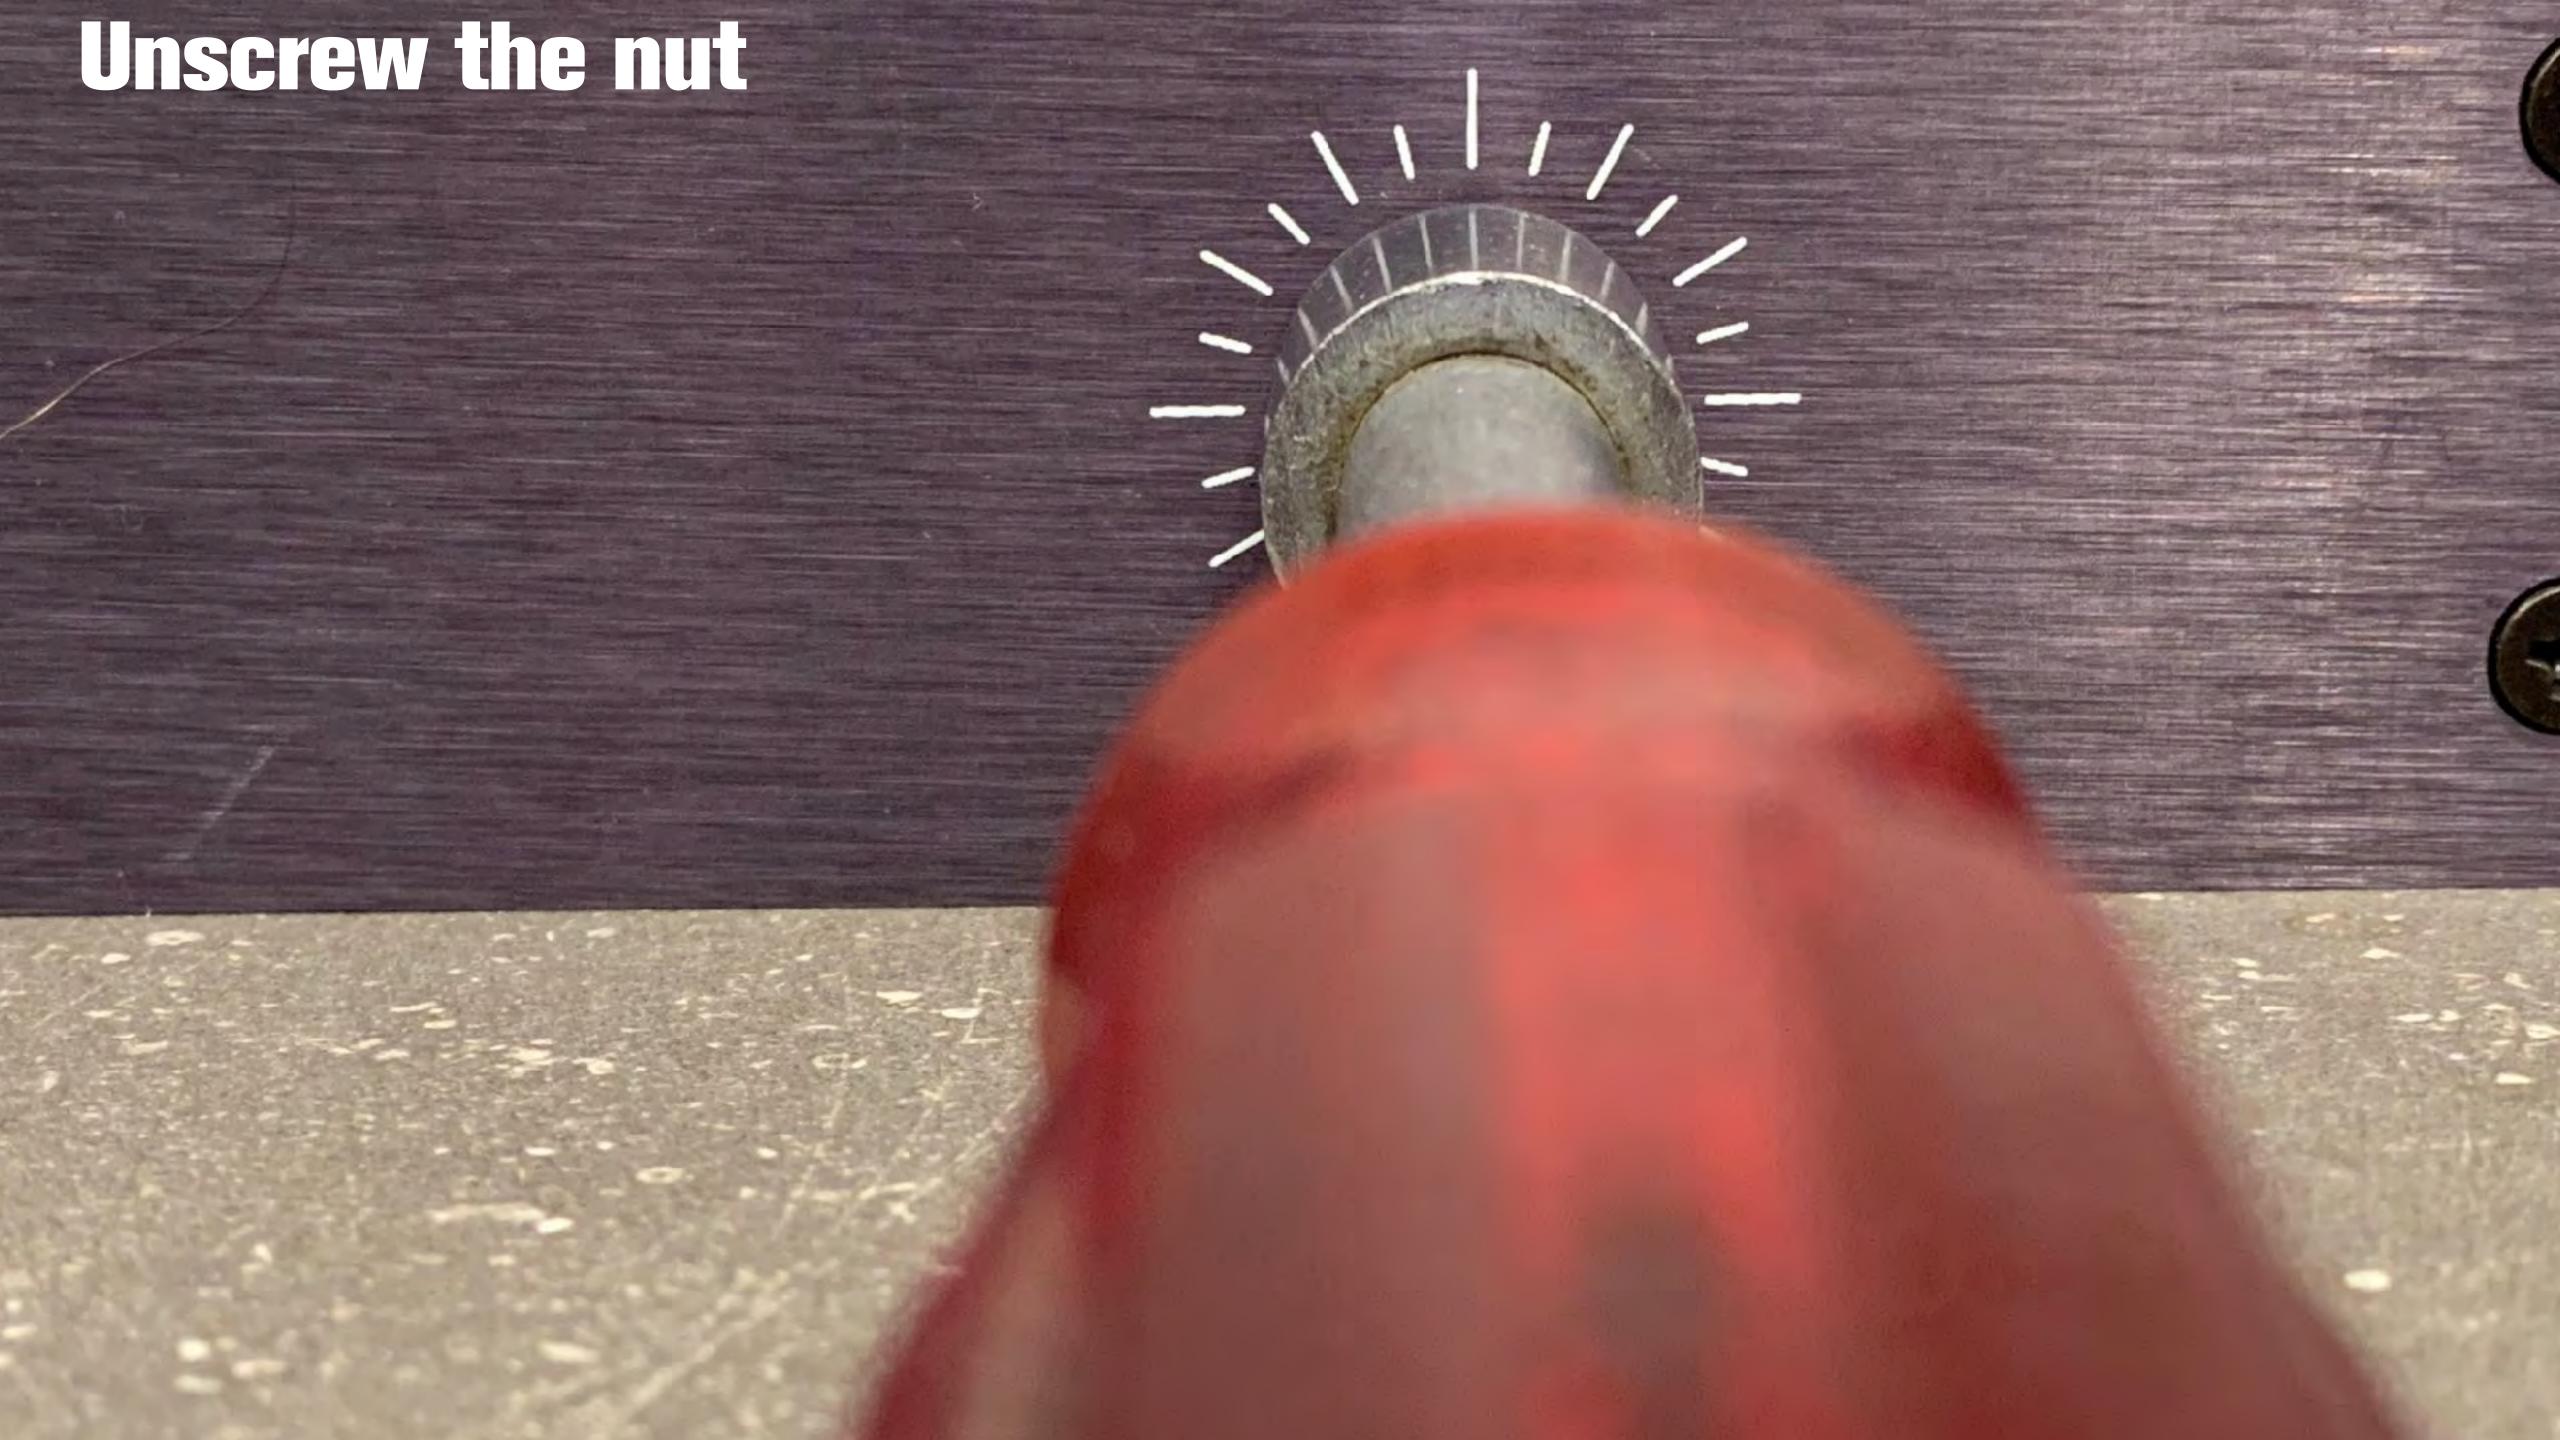







Remove the 4 screws from the front panel



The panel should now come off freely





Holding the rear of the pot in place with your fingers, replace the nut









Good work!

